



**For Model No.
MPDC110 BT IPS**



EN

User Manual



**This manual contains important safety precautions and information of correct use.
Please be sure to read this manual carefully before use so as to avoid any accidents.**

Do not place the product in hot, wet or dusty environment, especially in summer,
do not leave the product inside a car with all windows closed.


Avoid dropping, impacting or shaking the product violently, otherwise it may cause damages or malfunctions.

Select a proper volume to avoid ear problem when using earphones.

Do not cross the road or drive vehicles, using headphones to avoid traffic accidents.

Be sure to use the provided chargers and accessories in the package.

Be sure to charge the product when the following situations take place,

- The battery icon shows lower or empty.
- System automatically shut down and it turns off soon after restart.
- Operation keys do not respond properly.
- The device shows  on the top right corner.

Specification


Hardware specification

10.1" IPS 1280 x 800 Capacitive touch panel
Capacitive 5-point multi-touch screen
CPU: ARM cortex A9 processor
RAM : DDR3 1GB (3D accelerator possible for 3D games)
Wi-Fi (IEEE802.11 b/g/n) for internet connection
Dual camera 2M pixel (backside), 0.3M pixel (front)
HDMI port for TV-out (1080p output support)
USB host for OTG function
G-sensor
Micro SD card slot recognizing up to 32GB
Built-in speaker & Built-in MIC
5V DC power adapter



Software specification

Andriod 4.1
Google browser
Wi-Fi connection
e-Book function (all e-book formats supported by application)
1080p HD file playback
VoIP phone function with Wi-Fi connection
Possible to view/edit MS office files by application
Video: AVI, RM/ RMVB, FLV, MPG4 – 1, MPEG – 2 etc.
Audio: MP3, WMA, AAC, WAV etc
Photo: JPEG, BMP, GIF, PNG, TIFF

 Name

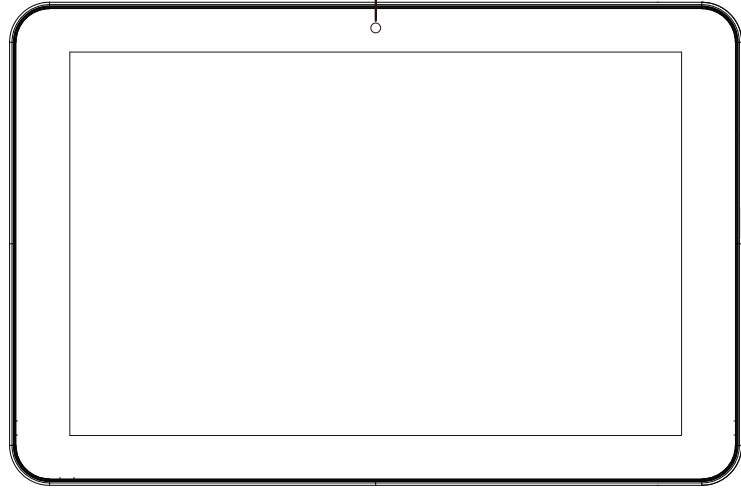


Camera(front)

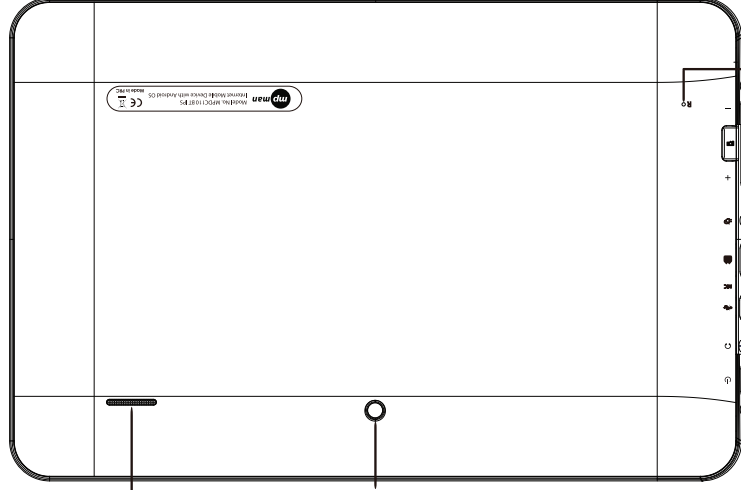  


Speaker

 Camera(back)

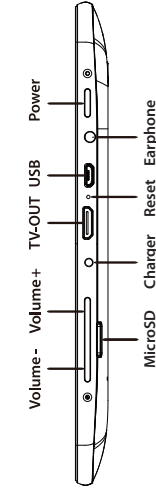

 Volume- Volume+ TV-OUT USB
MicroSD Charger Reset Earphone
Power

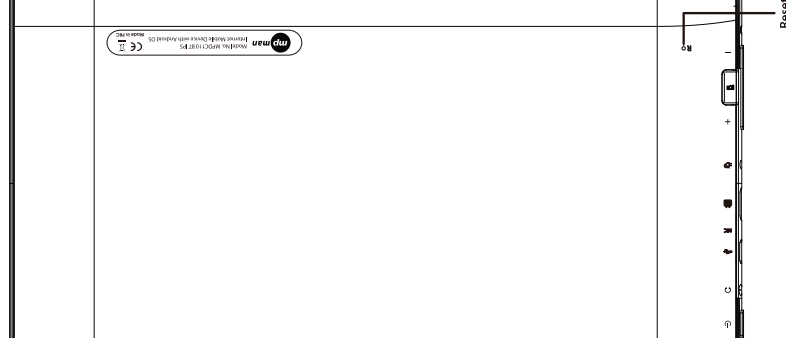


Reset

 
Important Notice

- If the device is freezing or stuck, press the reset button (a small hole). Another way to turn off the device by force is to hold pressing power button for more than 10 seconds.
- When the performance is slow after using some applications, it is recommended to close running application in setting menu.
- Use "File Manager" at main menu to search files.

Instruction

Charging

- Be sure to use the power adapter (DC5V, 2A) that is provided in the package, otherwise, the device may be damaged and does not work.
- See the battery icon () on the status bar to check charging.
- It takes approx.. 5-6 hours to be fully charged from empty battery. Do not charge more than 10hours to protect the device.

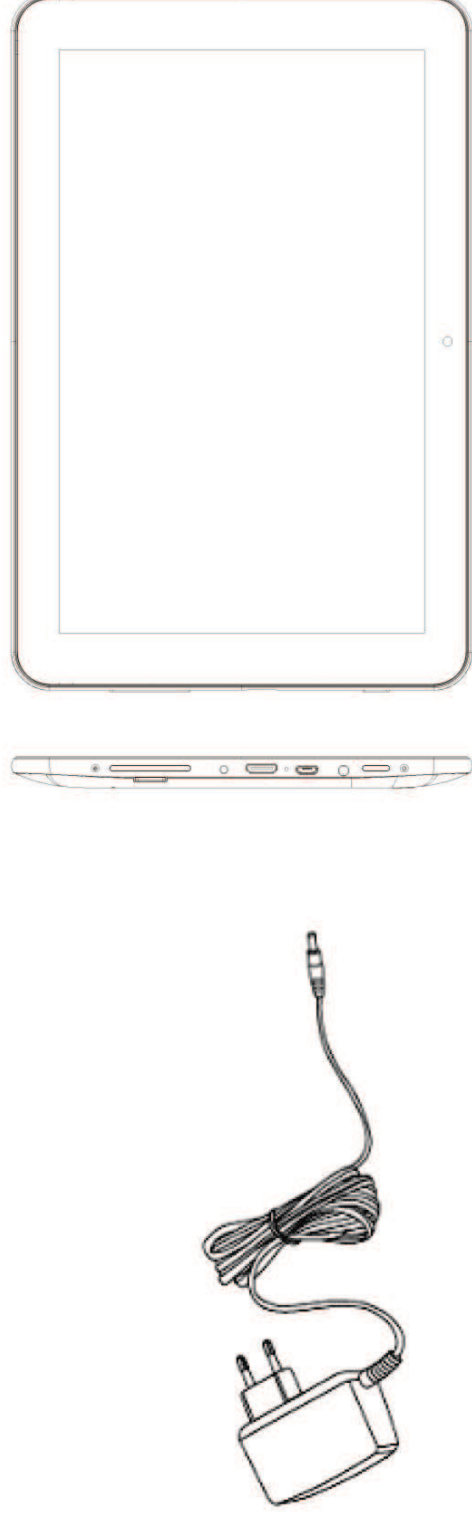

Note

The device is equipped with high performance processor.
It may be warm in case of using long or while charging, but not the problem.

 
1. Power On/Off

Long press power button to turn on/off the device. It may take a minute to boot the device.

Short press power button to turn on/off the screen.(Standby mode. Refer to 3. below)


2. Desktop

After turning on the device, desktop displays with shortcut icons and arrow panel at the right side

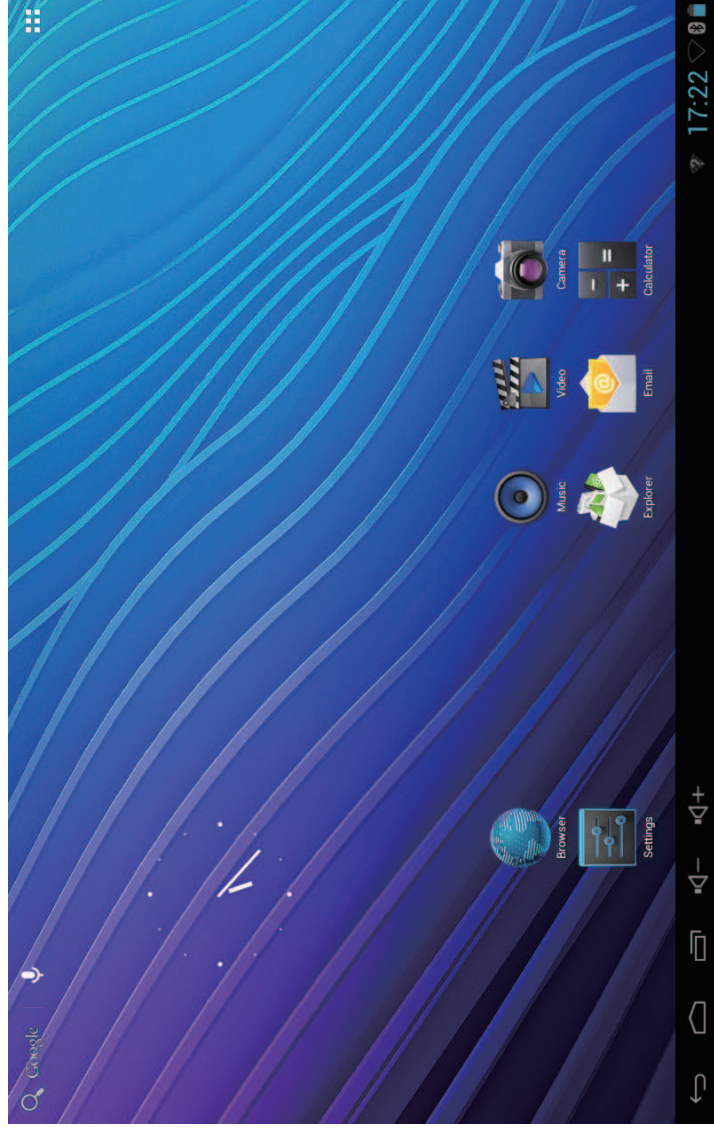

3. Standby mode(Screen off mode) / Unlock the screen

 Short press the power button to turn on/off the screen (standby mode on/off).
After standby mode off, slide the lock icon in order to unlock the screen.

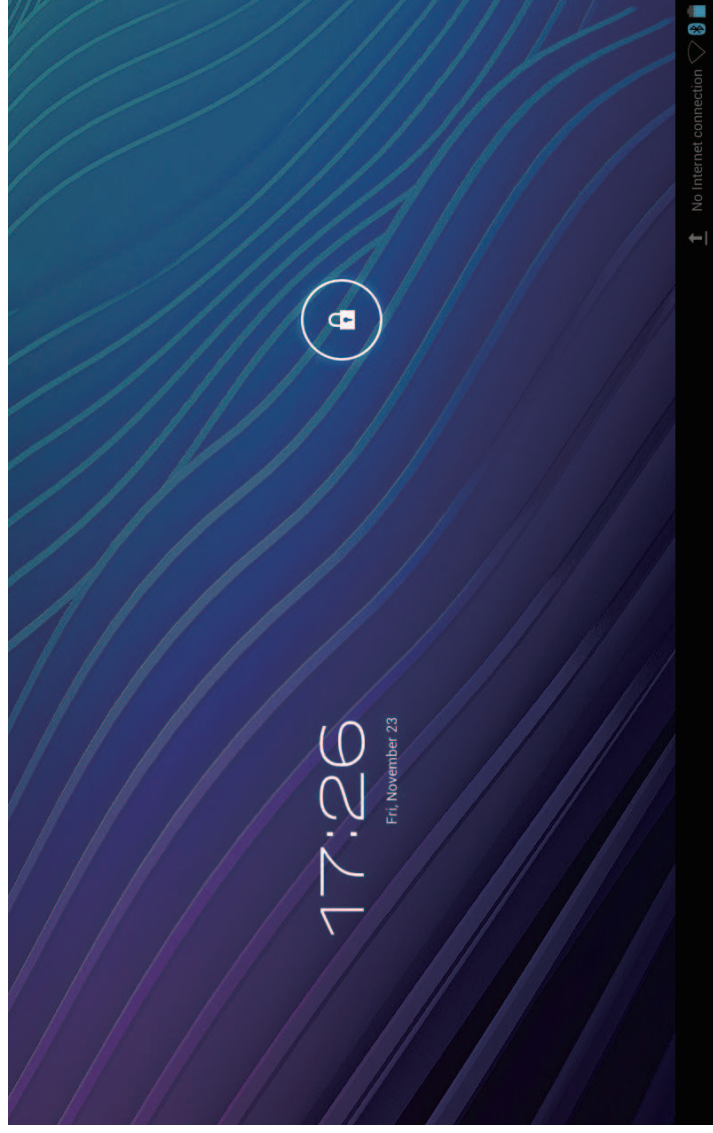


4. System settings

On the desktop, press menu button and select system settings.



Press system settings

 1. Wireless & networks

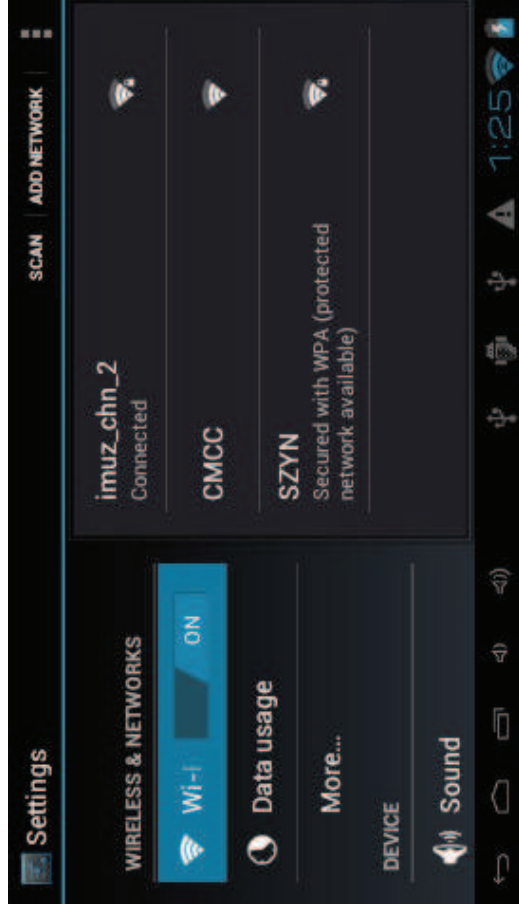

Wi-Fi – Press Wi-Fi to turn on/off

 
Wi-Fi settings - Press Wi-Fi settings, then the device will automatically search the available Wi-Fi signals. Select the network you want to connect with.

2. Sound




Set up each setting as you like.

3. Display

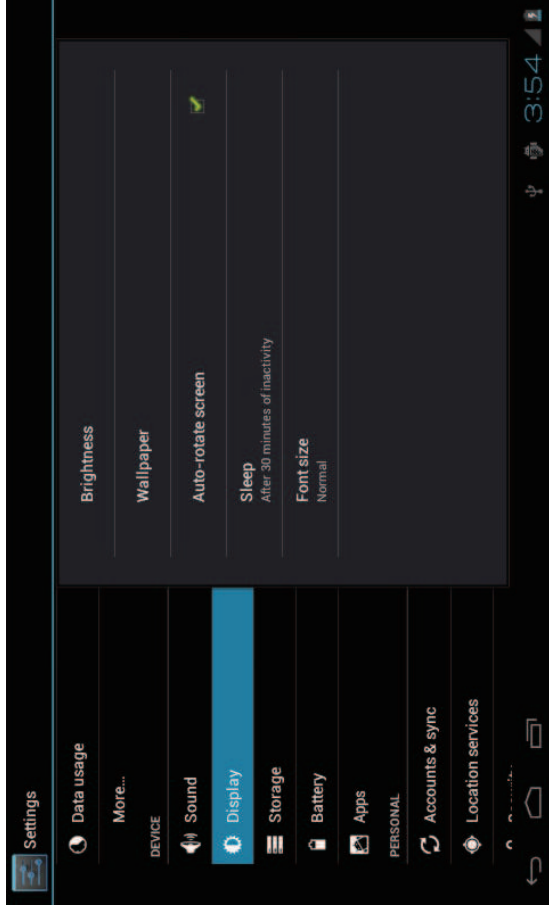

Set up each setting as you like.

 
4. Storage

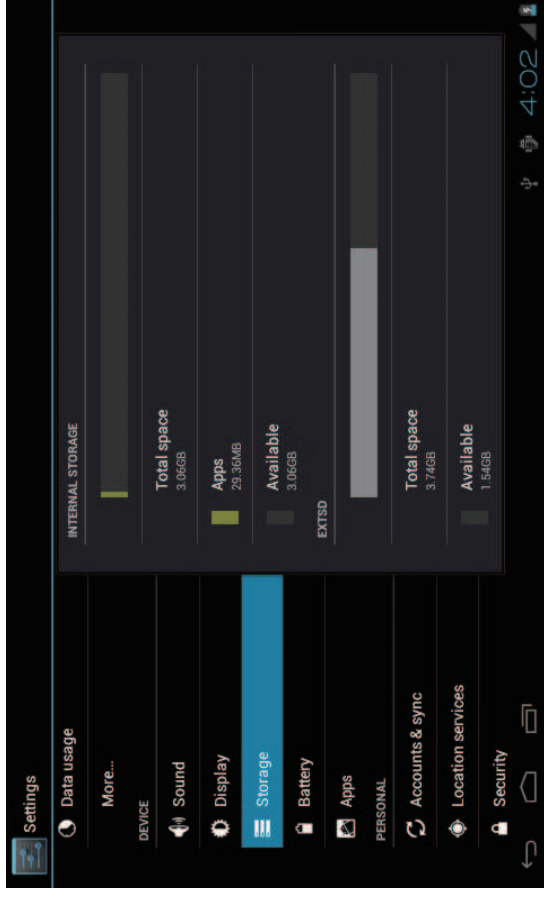

Check device memory and microSD card status.
Unmount SD card – Unmount the SD card for safe removal.


5. Battery

 Check battery usage status.

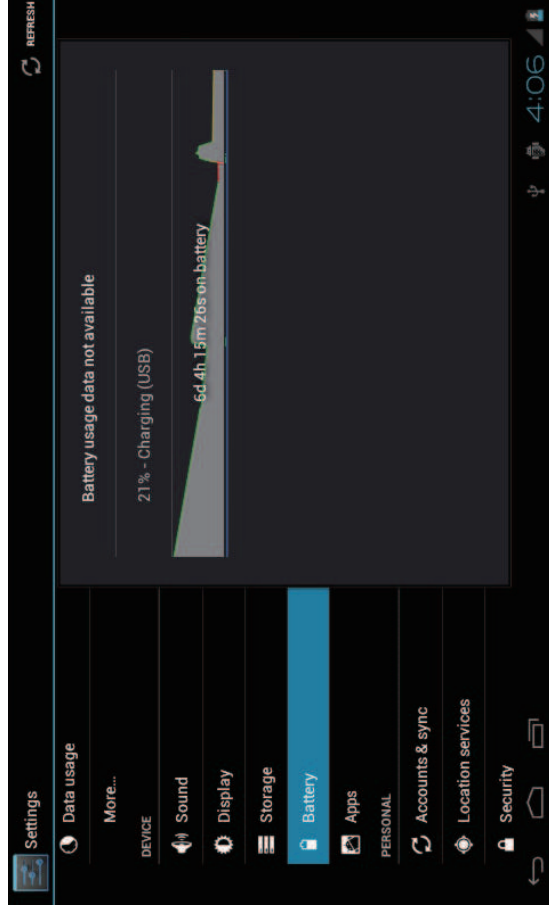


6. Apps

 Manage downloaded or running applications.

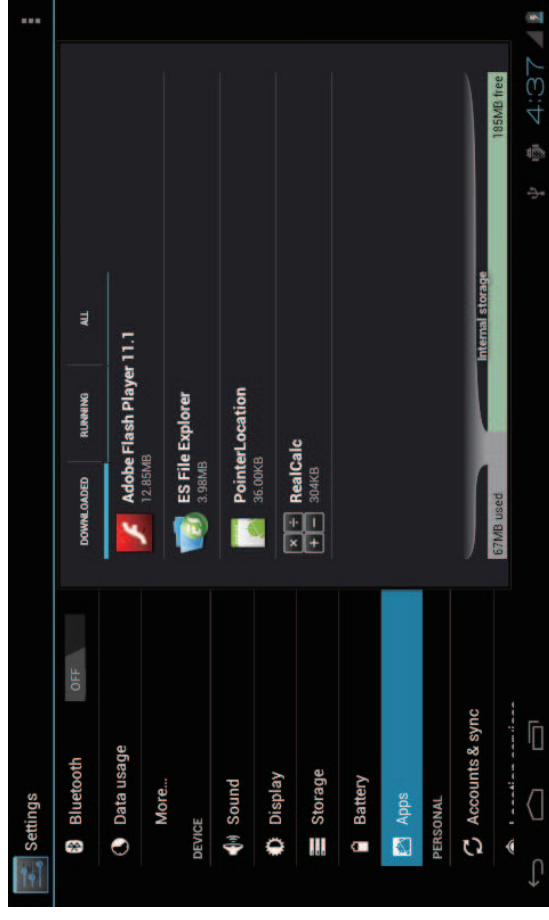


 Downloaded
All installed application are listing.

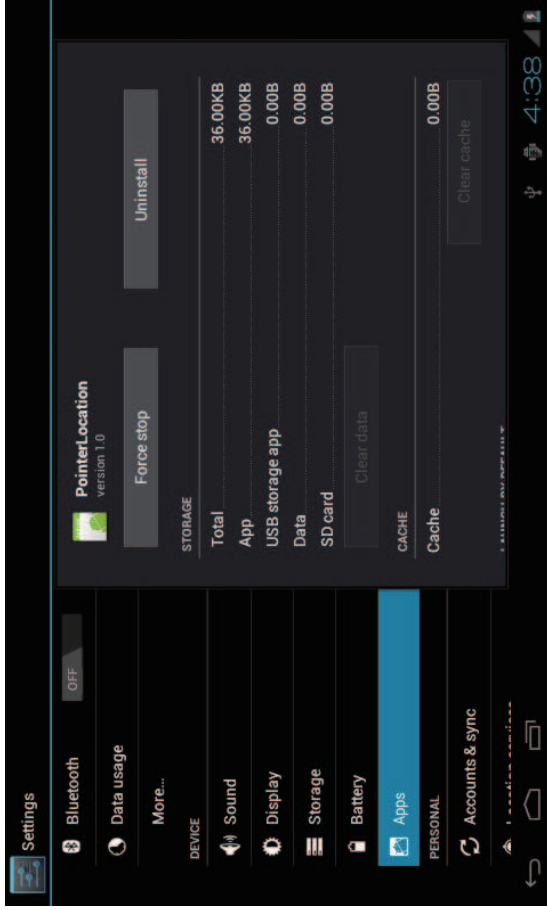

Keep pressing an application to manage.

 Press Uninstall to uninstall the selected application.

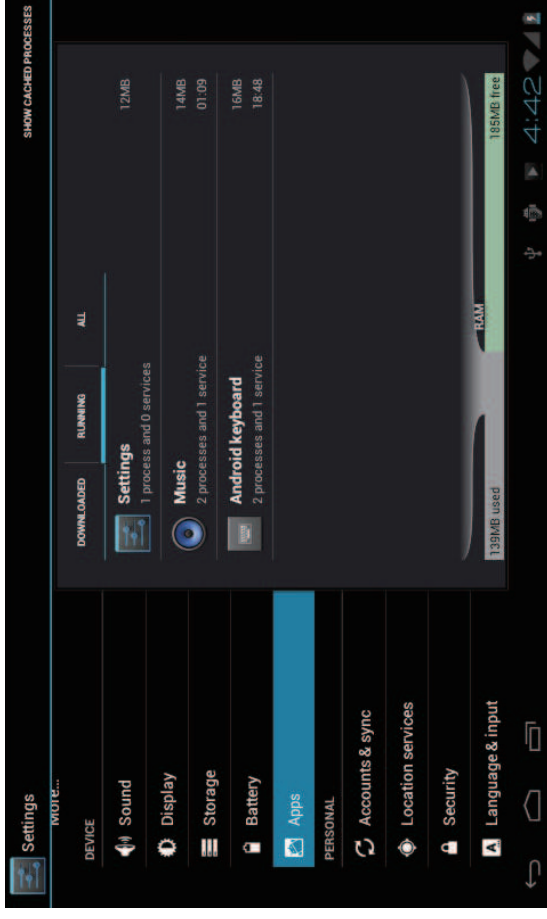

Running services

View and control currently running services.

7. Account & sync

Create your account. After connecting Wi-Fi network, the e-mailing system synchronizes your account with the device. Emails are automatically downloaded into the device.

8. Location services

Google's location service - Let apps use data from sources such as WiFi and mobile networks to determine your approximate location

9. Security

Screen lock – Protect your device from unauthorized use by creating a personal screen unlock pattern
Make passwords visible – Show password as you type.
Unknown sources – If you want to allow installation of non-Market Applications,
Press Unknown sources and presses OK.



 
Install from SD card – Install encrypted certificates from SD card.

10. Language & input

Language – Choose your preferable language.

Keyboard & input method – Change keyboard & keyboard settings.

On Language & input settings, if you need other languages besides English on keyboard, press the relevant keyboard and enter the chosen Keyboard settings, select Keyboards, press the language you need.

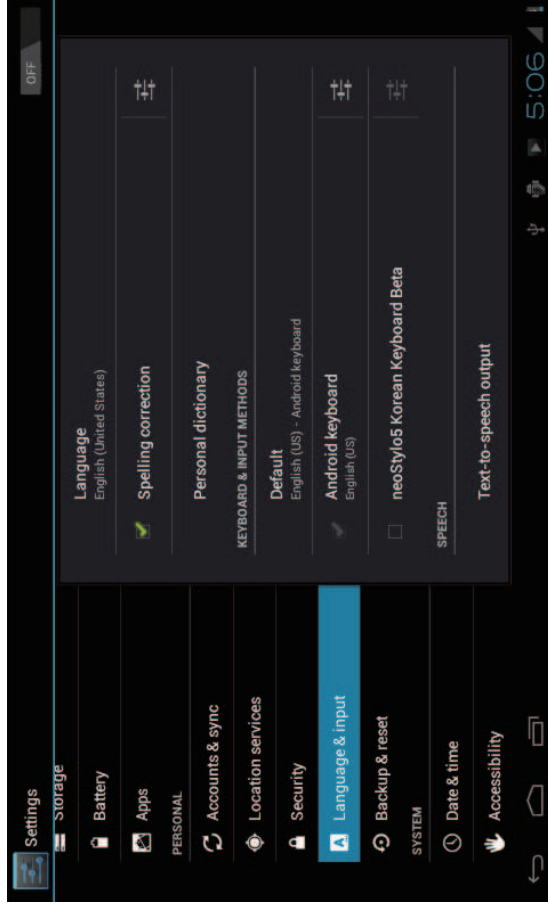

11. Date & time

Set date & time and format

12. Developer options

 
Set options for application development

13. About tablet

See status, legal information, ETC


How to connect/disconnect the device with/from the computer

On main desktop, connect the device with the PC, touch right side of the status bar on the bottom of desktop

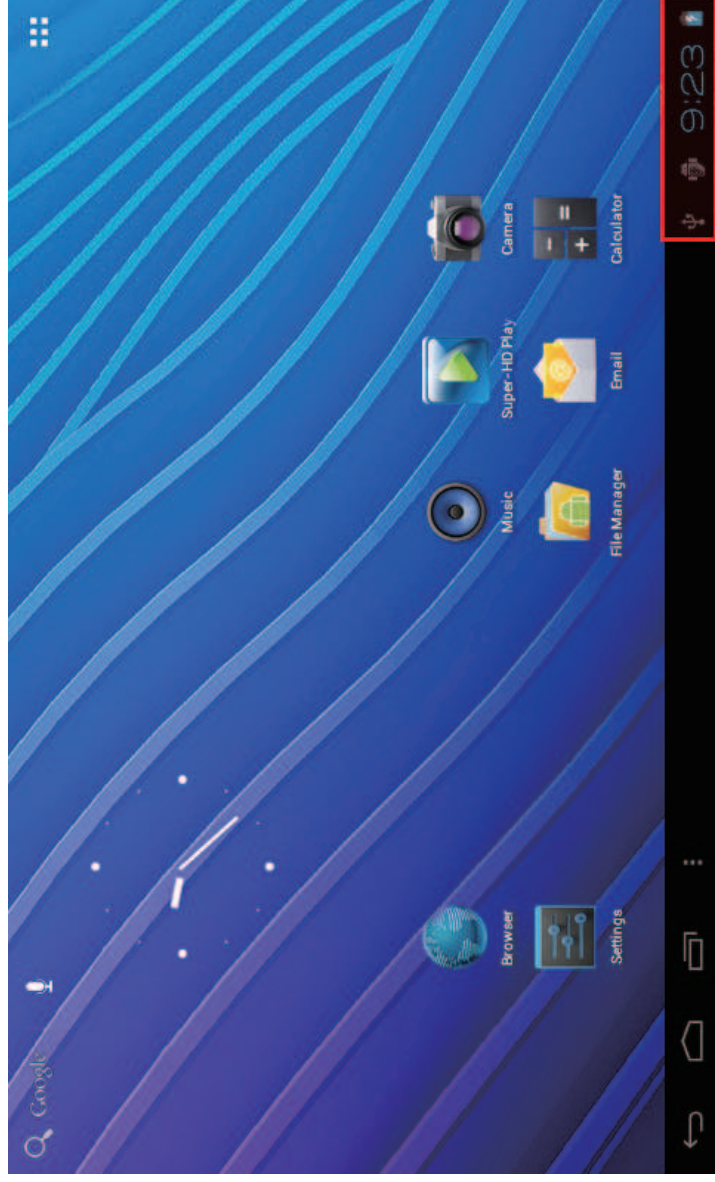



 Press “USB connected”, select “Turn on USB storage”.
The device is recognized at Explorer of the computer.
Now you can use it as an external storage.

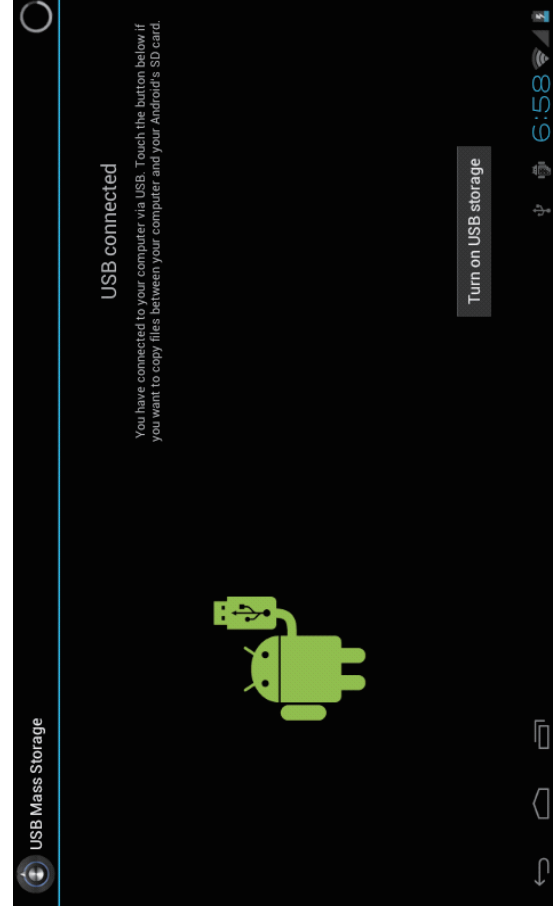

After finishing your work,
Press “Turn off USB storage” to unmount it.

How to install Applications(.apk file) into the device

Method 1.

1. Connect the device with internet. See above [1.Wireless & networks] in order to connect internet.
2. Run "Opera" and search the applications you want to install.
3. Follow the instruction on the screen for installation.

Method 2.

 
1. With your computer, search application file(.apk) that you want to install into the device.
2. Download the file(.apk) into your computer.
3. Connect the device with your computer. See above [How to connect/disconnect the device with/from the computer.]
4. Copy and paste .apk file into the device and disconnect it from your computer.
5. Run "File manager" and find .apk file that was copied into the device.
6. Press the file to install and follow the instruction on the screen.

Note

You may only download adult applications if you are at least 18 years of age, or at least the age of majority in the jurisdiction where you reside or from which you download adult applications. If you do not meet these requirements, then you do not have permission to download adult applications. In case of any problems including legal issues from the breach by end-user's own decision, the manufacturer shall not be responsible.

HDMI connection with TV

Turn on the device and TV
Connect the device with TV using HDMI cable.

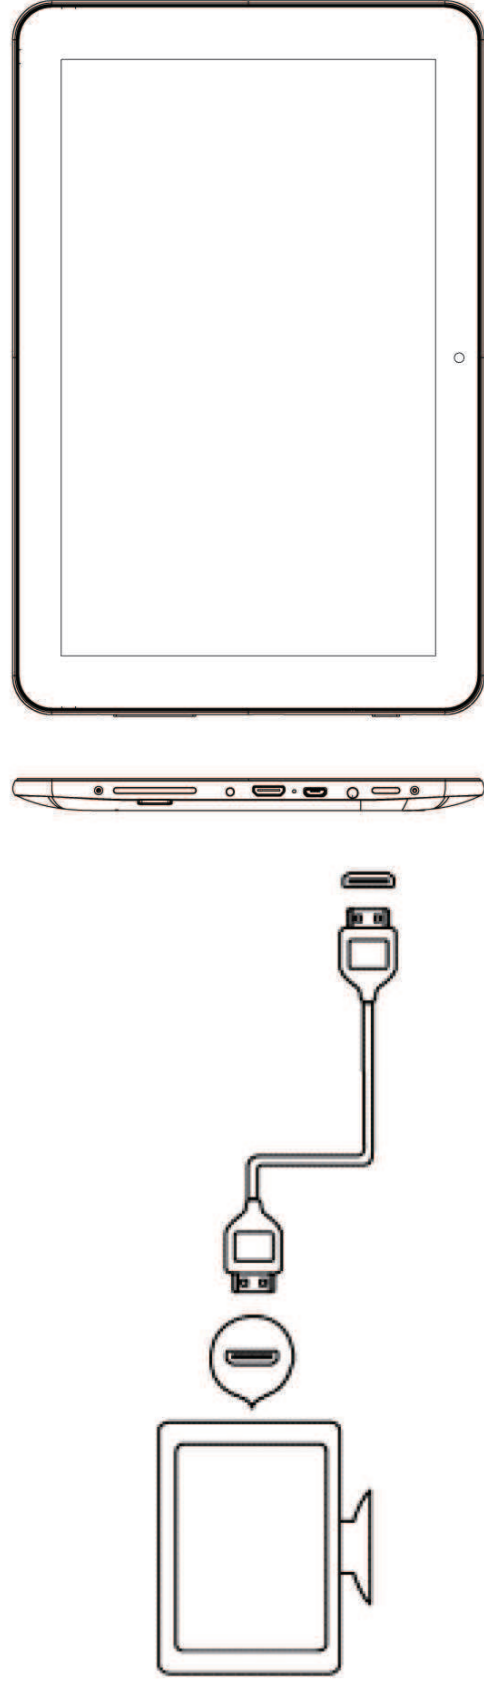



Note

HDMI cable is optional, it may not come in the package, depending on countries.

How to make desktop icons

Press the upper right side icon of desktop, the pop-up displays.

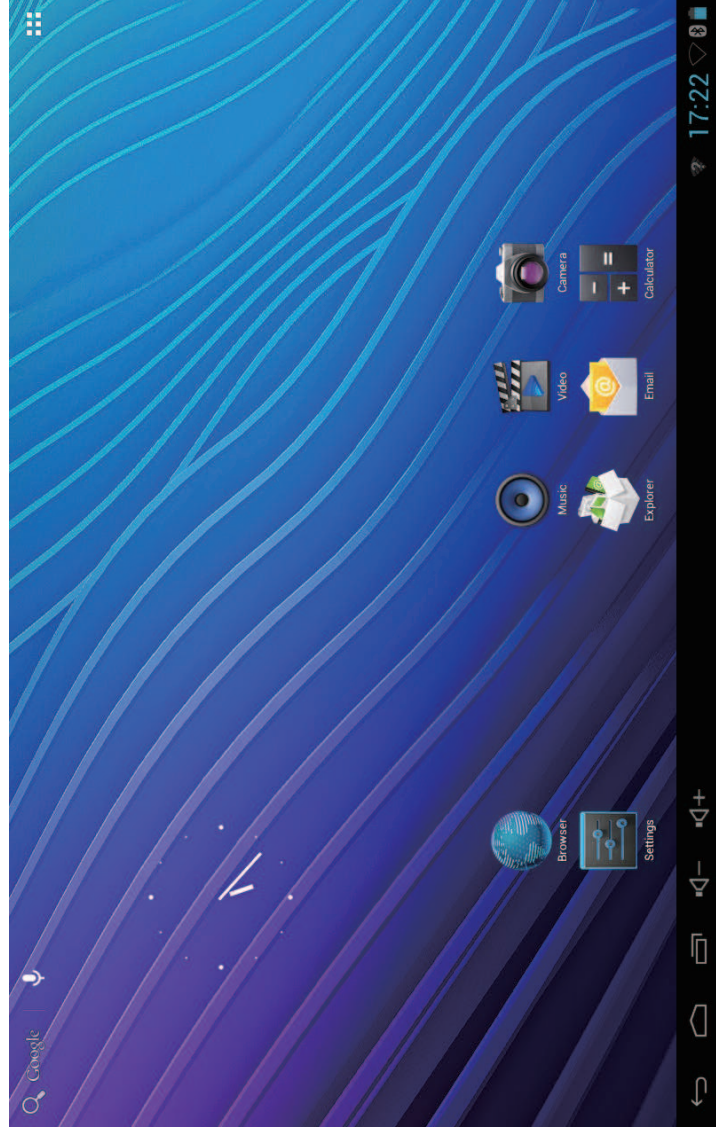 

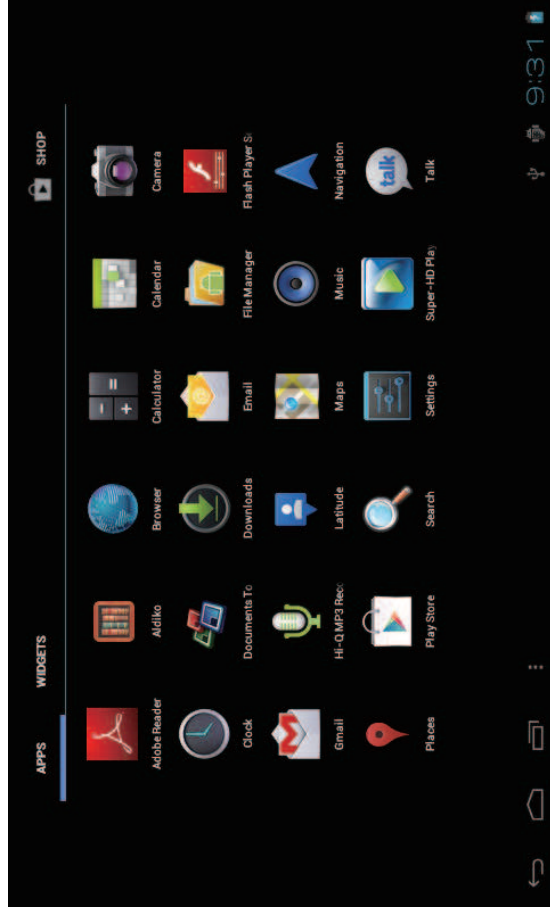 

Shortcuts

Long press your desired APK icon and put it on the desktop.

Wallpaper

Long press the desktop, press Wallpapers and select one of categories of wallpaper. Select one you desire and press Set wallpaper.

 


Widgets

Long press your desired widget icon and put it on the desktop.

Change Input Method

If your device was installed with other more input method, long press setting icon of keyboard, and the pop-up displays.

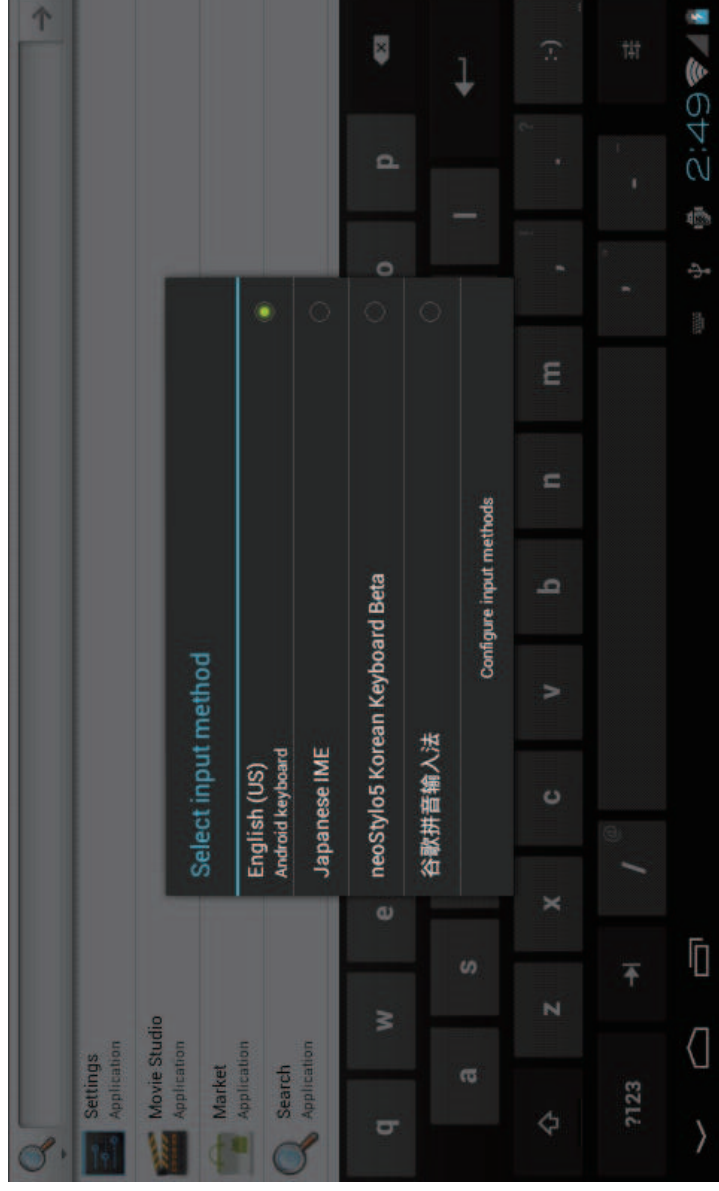


Select the installed keyboard, then the keyboard will appear with your desired language you installed.

Specification

OS	Android 4.1
CPU	ARM cortex A9 processor
SDRAM	DDR3 1GB (3D accelerator possible for 3D games and 3D movie)
Display	10.1" IPS 1280 x 800 Capacitive touch panel
Multi-touch screen	multi-touch
Built-in flash memory	2 / 4 / 8 / 16GB, see the package
IO PORTS	Audio port
	USB port
	DC port
	HDMI port
	Micro SD
	OTG port
	Button
Speaker	Power, VOL-, VOL+, Frequency response : 20Hz – 20k Hz, N/S : >90%
G-sensor	Yes
Camera	0.3M pixel (front), 2M pixel (backside)
Wi-Fi	802.11b/g/n
Power	Adaptor 5V -2A
Battery	3.7V Li-Polymer
Dimension	260.8 x 172 x 10.8 mm
Charging time	by charger approx. 5~6 hours

For more information please check our website

 www.mpmaneurope.com

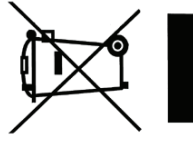

CE



A pleine puissance, l'écoute
prolongée du baladeur peut
endommager l'oreille de
l'utilisateur